

E35 Series Controllers



Consultancy • Installation • After Sale Service • Nationwide Authorised Dealer Network


P: (09) 838 9444 - 0800 33 66 33 F: (09) 838 6223 W: www.waterheating.co.nz
3 Corban Ave, Henderson, Auckland 0612 PO Box 21-586, Henderson, Auckland 0650

E35 Series Controllers

Page	Controller	Description	Temperature	De-Ice	HP / LP	Time Clock
4 - 5	E35	Heat & Chill				
6 - 7	E35-1	Heat OR Chill				
8 - 9	E35-2	Heat OR Chill				
10	E35-3	De-Ice				
11 - 12	E35-4	Heat OR Chill				
13 - 14	E35-5	Heat/Chill OR Heat only OR Chill only				

Technical Index

- Temperature display range:
-50 - 150°C (The resolution is 0.1°C)
-58 - 302°F (The resolution is 0.1°F)
- Power supply: AC 220±10%
(Refer to the wiring diagram)
- Operating environment:
temperature -30°C - 80°C, humidity≤85%
- Relay contact capability: 8A/250VAC
(pure resistive load)
- Temperature sensor: NTC R25=5kΩ,
B(25/50)=3470K

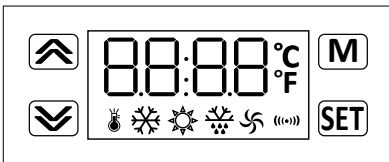

Indicator Light	Lit Function	Flashing Function
	Changing current water temperature	N / A
	Chilling Mode	Waiting on time delay
	Heating Mode	Waiting on time delay
	Defrost Mode	
	N / A	N / A
	N / A	Alarm

If Set, default password = 0077

Change Set Point Temperature:

Press and hold [SET] for 3 seconds, display will change from reading current [SET] water temperature to reading the current set point.

Press and release the up or down arrow buttons to alter temperature or press and hold to change rapidly.
Press [SET] to confirm the new value and resume normal operation.

Check current defrost sensor temperature: (De-ice capable models only)

Press and hold the Down arrow, this will display what the sensor is currently reading.
Release the Down arrow to return to normal display.

Entering advanced menu:

Press and hold the [M] button for 5 seconds

Navigate the F numbers using the Up and Down arrows

Use [SET] to enter into the options for the F number you wish to alter.


Change the value with the Up and Down arrows

Press [SET] to confirm the new value or press [M] to cancel the change and return to the F menu.

Model E35

Detailed Parameters

- F10: Temperature Dead Band for Heat & Chill Controller
 F11: Temperature at which the heat pump will stop at and has a range which is dictated by the values in F14 and F13.
 F12: (Differential) Number of degrees + / - from set point (F11) before the heat pump will start.
 F13: Maximum water temperature that can be set in F11 parameter.
 F14: Minimum water temperature that can be set in F11 parameter.
 F18: (Defrost Sensor Calibration) Adjusts the offset reading for the defrost sensor probe in situations of reading higher or lower than actual temperature (or consult HWHP about relocating sensor).
 F19: (Water Sensor Calibration) Adjusts the offset reading for the water sensor probe in situations of reading higher or lower than actual temperature.
 F21: (Compressor Time Delay) Minimum time to start after heating or cooling or auto signal has been called for.
 F29: Set the controller mode between heating or cooling or auto E35-1, this is set to 0 for E35 for auto Heating & Cooling
 F30: Minimum number of minutes between defrost cycles.
 F31: Temperature at which the Defrost Cycle will trigger.
 F32: Temperature at which the Defrost Cycle will terminate.
 F33: Time delay in minutes at which the Defrost Cycle will initiate once triggered by F31 setting.
 F34: Maximum number of minutes the Defrost Cycle will run for.
 F38: Fan status in defrost mode
 F41: Fan Start/Run modes

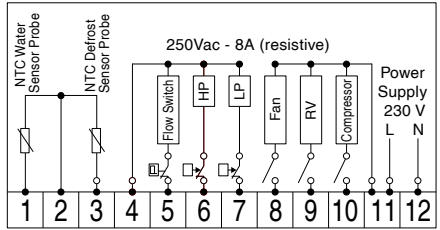

Value	State	F41
1	Fan Starts Delayed	Fan starts after compressor and stops before compressor
2	Fan Starts Ahead	Fan starts before compressor
3	Fan Always Run	

- F42: Time parameter in seconds for fan Start/Delay for F41 in modes 1 & 2.
 F43: Time parameter in seconds for fan Stop/Delay for F41 in modes 1 & 2.
 F51: Flow Switch mode options (note: Flow switch will allow comp delay count down if made without break within 1 minute of pump starting, and calling for heating or cooling).

Value	State	Alarm code [FL]	F51
0	Disabled	No flow control and no Alarm	
3	Enabled	Display [FL] on contact break, resume normal display when contact is made	
5	Enabled	Display goes blank when contact breaks, resumes temperature display when contact is made	

F52: High Pressure Safety Switch

Value	State	Alarm code [HP]	F52
0	Disabled	No high pressure control and no Alarm (HP not used).	
3	Enabled	Display [HP] on contact break, resume normal display when contact is made (auto reset).	
4	Enabled	Display [HP] on contact break, does not auto resume when contact is made. User interaction required, press [SET] key to resume (Manual reset).	

F53: Low Pressure Safety Switch

Value	State	Alarm code [LP]	F53
0	Disabled	No Low Pressure control and no Alarm (LP not used)	
3	Enabled	Display [LP] on contact break, resume normal display when contact is made (auto reset)	

F80: Password prevents alteration of the configuration menu by pressing [M].

To enter a password use the down arrow button 0000 will be displayed, press set and the first 0 will flash, up and down arrow to alter this value between 0 and 9, press set and the second 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the third 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the fourth 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the display will go back to the menu displaying F86. The password is now set and will be required to alter the set point temperature or enter the menu system.

Value	State	Description	F80
OFF	Disabled	No password lock out (Factory setting).	

F81: Temperature units of measure

Value	Description	F81
C	Temperatures are displayed in Degrees Celsius (Factory setting).	
F	Temperatures are displayed in Degrees Fahrenheit	

F84: Number of times the compressor has started.

F85: Displays number of hour's compressor has run.

F86: Default value is No, Yes to reset F85.

F87: Number of hours the compressor will run for before it is stopped, this needs to be reset for the heat pump to run again.

Alarm Codes:


Code	Cause
A21	SHr means water temperature sensor short OPE means water sensor connection is open
A22	SHr means defrost temperature sensor short OPE means defrost sensor connection is open
FL	No water flow or flow switch failure F51 (Mode 3 only)
HP	High Pressure Safety Switch triggered
LP	Low Pressure Safety Switch triggered
A99	Compressor run time expired

E35		
Code	Parameter Name	Range
F10	Temperature Dead Band	0.0 to 20.0 (°C)
F11	Temperature Set Point	F14 to F13 (°C)
F12	Temperature Differential	0.1 to 20.0 (°C)
F13	Maximum Temperature Setting	20.0 to 150.0 (°C)
F14	Minimum Temperature Setting	-50.0 to 20.0 (°C)
F18	Defrost Temperature Offset	-20.0 to 20.0 (°C)
F19	Water Temperature Offset	-20.0 to 20.0 (°C)
F21	Compressor Time Delay	0 to 10 (minutes)
F29	Controller Mode	Auto, Heat, Cool
F30	Defrost Cycle	Off / 1 to 999
F31	Defrost Start Temperature	-20.0 to 20.0 (°C)
F32	Defrost End Temperature	0.0 to 100.0 (°C)
F33	Defrost Start Time	1 to 99 (minutes)
F34	Maximum Defrost Duration	Off / 1 to 99 (minutes)
F38	Fan status in defrost mode	On / Off
F41	Fan Run Mode	1, 2, 3
F42	F41 Mode 1 & 2 Start time	0 to 99 (seconds)
F43	F41 Mode 1 & 2 Stop time	0 to 99 (seconds)
F51	Flow switch control mode	0, 3, 5
F52	High Pressure control mode	0, 3, 4
F53	Low Pressure control mode	0, 3
F80	Password	Off / 1 to 9999
F81	Temperature Unit	C or F
F84	Compressor Start Counter	0 to 9999 displayed
F85	Compressor Hour Counter	0 to 9999 displayed
F86	Compressor Hour Counter Reset	No, Yes = reset
F87	Limited Compressor running time	0 to 9999 hours

Model E35-1

Detailed Parameters

- F11: Temperature at which the heat pump will stop at and has a range which is dictated by the values in F14 and F13.
- F12: (Differential) Number of degrees + / - from set point (F11) before the heat pump will start.
- F13: Maximum water temperature that can be set in F11 parameter.
- F14: Minimum water temperature that can be set in F11 parameter.
- F18: (Defrost Sensor Calibration) Adjusts the offset reading for the defrost sensor probe in situations of reading higher or lower than actual temperature (or consult HWHP about relocating sensor).
- F19: (Water Sensor Calibration) Adjusts the offset reading for the water sensor probe in situations of reading higher or lower than actual temperature.
- F21: (Compressor Time Delay) Minimum time to start after heating signal has been called for.
- F29: Set the controller mode between heating or cooling
- F30: Minimum number of minutes between defrost cycles.
- F31: Temperature at which the Defrost Cycle will trigger.
- F32: Temperature at which the Defrost Cycle will terminate.
- F33: Time delay in minutes at which the Defrost Cycle will initiate once triggered by F31 setting.
- F34: Maximum number of minutes the Defrost Cycle will run for.
- F37: Defrost Modes

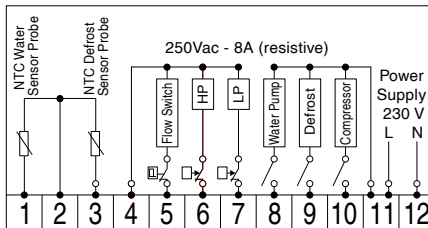

F37				
Value	Description	Running State	Comp Output	Defrost Output
0	RV is off - heating	Heat	Yes	No
	RV is on - defrosting	Defrost	Yes	Yes
1	RV is on - heating	Heat	Yes	Yes
	RV is off - defrosting	Defrost	Yes	No
2	Bypass Valve defrost	Heat	Yes	No
		Defrost	Yes	Yes
3	Electric heat defrost	Heat	Yes	No
		Defrost	No	Yes

RV=Reversing Valve

F51: Flow Switch mode options (note: Flow switch will allow comp delay count down if made without break within 1 minute of pump starting, and calling for heating or cooling).

Value	State	Alarm code [FL]	F51
0	Disabled	No flow control and no Alarm	
3	Enabled	Display [FL] on contact break, resume normal display when contact is made	
5	Enabled	Display goes blank when contact breaks, resumes temperature display when contact is made	

F52: High Pressure Safety Switch

Value	State	Alarm code [HP]	F52
0	Disabled	No high pressure control and no Alarm (HP not used).	
3	Enabled	Display [HP] on contact break, resume normal display when contact is made (auto reset).	
4	Enabled	Display [HP] on contact break, does not auto resume when contact is made. User interaction required, press [SET] key to resume (manual reset).	

F53: Low Pressure Safety Switch

Value	State	Alarm code [LP]	F53
0	Disabled	No Low Pressure control and no Alarm (LP not used)	
3	Enabled	Display [LP] on contact break, resume normal display when contact is made (auto reset)	

F80: Password prevents alteration of the configuration menu by pressing [M].

To enter a password use the down arrow button 0000 will be displayed, press set and the first 0 will flash, up and down arrow to alter this value between 0 and 9, press set and the second 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the third 0 will begin flashing, up and down arrow to alter this value

between 0 and 9, press set and the fourth 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the display will go back to the menu displaying F86. The password is now set and will be required to alter the set point temperature or enter the menu system.

Value	State	Description	F80
OFF	Disabled	No password lock out (Factory setting).	

F81: Temperature units of measure

Value	Description	F81
C	Temperatures are displayed in Degrees Celsius (Factory setting).	
F	Temperatures are displayed in Degrees Fahrenheit	

F84: Number of times the compressor has started.

F85: Displays number of hour's compressor has run.

F86: Default value is No, Yes to reset F85.

F87: Number of hours the compressor will run for before it is stopped, this needs to be reset for the heat pump to run again.

Alarm Codes:

Code	Cause
A21	SHr means water temperature sensor short OPE means water sensor connection is open
A22	SHr means defrost temperature sensor short OPE means defrost sensor connection is open
FL	No water flow or flow switch failure F51 (Mode 3 only)
HP	High Pressure Safety Switch triggered
LP	Low Pressure Safety Switch triggered
A99	Compressor run time expired


		E35-1	Factory defaults	
Code	Parameter Name	Range	Pool	Underfloor
F11	Temperature Set Point	F14 to F13 (°C)	28	35
F12	Temperature Differential	0.1 to 20.0 (°C)	0.5	2.0 to 5.0
F13	Maximum Temperature Setting	20.0 to 150.0 (°C)	40	45
F14	Minimum Temperature Setting	-50.0 to 20.0 (°C)	10	10
F18	Defrost Temperature Offset	-20.0 to 20.0 (°C)		0
F19	Water Temperature Offset	-20.0 to 20.0 (°C)		0
F21	Compressor Time Delay	0 to 10 (minutes)		5
F29	Controller Mode	Heat or Cool		Heat
F30	Defrost Cycle	Off / 1 to 999		15
F31	Defrost Start Temperature	-20.0 to 20.0 (°C)		-5
F32	Defrost End Temperature	0.0 to 100.0 (°C)		15
F33	Defrost Start Time	1 to 99 (minutes)		0
F34	Maximum Defrost Duration	Off / 1 to 99 (minutes)		10
F37	Defrost mode	0, 1, 2, 3		1
F51	Flow switch control mode	0, 3, 5		5
F52	High Pressure control mode	0, 3, 4		3
F53	Low Pressure control mode	0, 3		3
F80	Password	Off / 1 to 9999		Off
F81	Temperature Unit	C or F		C
F84	Compressor Start Counter	0 to 9999 displayed		-
F85	Compressor Hour Counter	0 to 9999 displayed		-
F86	Compressor Hour Counter Reset	No, Yes = reset		-
F87	Limited Compressor running time	0 to 9999 hours		-

Model E35-2

(Same as E35-4 but without a time clock facility)

Detailed Parameters

- F11: Temperature at which the heat pump will stop at and has a range which is dictated by the values in F14 and F13.
 F12: (Differential) Number of degrees + / - from set point (F11) before the heat pump will start.
 F13: Maximum water temperature that can be set in F11 parameter.
 F14: Minimum water temperature that can be set in F11 parameter.
 F19: (Water Sensor Calibration) Adjusts the offset reading for the water sensor probe in situations of reading higher or lower than actual temperature.
 F21: (Compressor Time Delay) Minimum time to start after heating signal has been called for.
 F29: Set the controller mode between heating or cooling
 F51: Flow Switch mode options (note: Flow switch will allow comp delay count down if made without break within 1 minute of pump starting, and calling for heating or cooling).

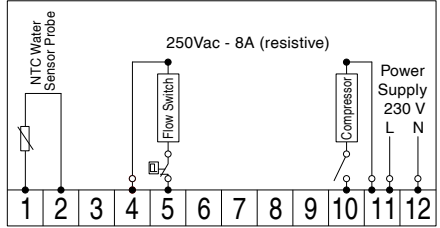

Value	State	Alarm code [FL]	F51
0	Disabled	No Flow Control and no Alarm	
3	Enabled	Display [FL] on contact break, resume normal display when contact is made	
5	Enabled	Display goes blank when contact breaks, resumes temperature display when contact is made	

F80: Password prevents alteration of the configuration menu by pressing [M].

To enter a password use the down arrow button 0000 will be displayed, press set and the first 0 will flash, up and down arrow to alter this value between 0 and 9, press set and the second 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the third 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the fourth 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the display will go back to the menu displaying F86. The password is now set and will be required to alter the set point temperature or enter the menu system.

Value	State	Description	F80
OFF	Disabled	No password lock out (Factory setting).	

F81: Temperature units of measure

Value	Description	F81
C	Temperatures are displayed in Degrees Celsius (Factory setting).	
F	Temperatures are displayed in Degrees Fahrenheit	

F84: Number of times the compressor has started.

F85: Displays number of hour's compressor has run.

F86: Default value is No, Yes to reset F85.

F87: Number of hours the compressor will run for before it is stopped, this needs to be reset for the heat pump to run again.

Alarm Codes:

Code	Cause
A21	SHr means water temperature sensor short OPE means water sensor connection is open
A22	SHr means defrost temperature sensor short OPE means defrost sensor connection is open
FL	No water flow or flow switch failure F51 (Mode 3 only)
HP	High Pressure Safety Switch triggered
LP	Low Pressure Safety Switch triggered
A99	Compressor run time expired

E35-2


Code	Parameter Name	Range
F11	Temperature Set Point	F14 to F13 (°C)
F12	Temperature Differential	0.1 to 20.0 (°C)
F13	Maximum Temperature Setting	20.0 to 150.0 (°C)
F14	Minimum Temperature Setting	-50.0 to 20.0 (°C)
F19	Water Temperature Offset	-20.0 to 20.0 (°C)
F21	Compressor Time Delay	0 to 10 (minutes)
F29	Controller Mode	Heat or Chill
F51	Flow switch control mode	0, 3, 5
F80	Password	Off / 1 to 9999
F81	Temperature Unit	C or F
F84	Compressor Start Counter	0 to 9999 displayed
F85	Compressor Hour Counter	0 to 9999 displayed
F86	Compressor Hour Counter Reset	No, Yes = reset
F87	Limited Compressor running time	0 to 9999 hours

Model E35-3

(Defrost controller only)

Detailed Parameters

- F18: (Defrost Sensor Calibration) Adjusts the offset reading for the defrost sensor probe in situations of reading higher or lower than actual temperature (or consult HWHP about relocating sensor).
- F30: Minimum number of minutes between defrost cycles.
- F31: Temperature at which the Defrost Cycle will trigger.
- F32: Temperature at which the Defrost Cycle will terminate.
- F33: Time delay in minutes at which the Defrost Cycle will initiate once triggered by F31 setting.
- F34: Maximum number of minutes the Defrost Cycle will run for.
- F80: Password prevents alteration of the configuration menu by pressing [M].

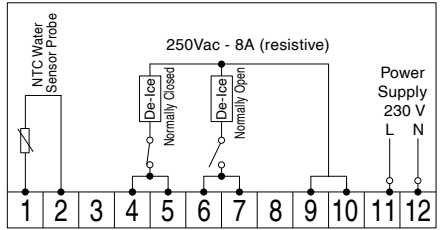

To enter a password use the down arrow button 0000 will be displayed, press set and the first 0 will flash, up and down arrow to alter this value between 0 and 9, press set and the second 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the third 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the fourth 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the display will go back to the menu displaying F86. The password is now set and will be required to alter the set point temperature or enter the menu system.

Value	State	Description	F80
OFF	Disabled	No password lock out (Factory setting).	

F81: Temperature units of measure

Value	Description	F81
C	Temperatures are displayed in Degrees Celsius (Factory setting).	
F	Temperatures are displayed in Degrees Fahrenheit	

F84: Number of times the compressor has started.

F85: Displays number of hour's compressor has run.

F86: Default value is No, Yes to reset F85.

F87: Number of hours the compressor will run for before it is stopped, this needs to be reset for the heat pump to run again.

Alarm Codes:

Code	Cause
A21	SHr means water temperature sensor short OPE means water sensor connection is open
A22	SHr means defrost temperature sensor short OPE means defrost sensor connection is open
FL	No water flow or flow switch failure F51 (Mode 3 only)
HP	High Pressure Safety Switch triggered
LP	Low Pressure Safety Switch triggered
A99	Compressor run time expired

E35-3		
Code	Parameter Name	Range
F18	Defrost Temperature Offset	-20.0 to 20.0 (°C)
F30	Defrost Cycle	Off / 1 to 999
F31	Defrost Start Temperature	-20.0 to 20.0 (°C)
F32	Defrost End Temperature	0.0 to 100.0 (°C)
F33	Defrost Start Time	1 to 99 (minutes)
F34	Maximum Defrost Duration	Off / 1 to 99 (minutes)
F80	Password	Off / 1 to 9999
F81	Temperature Unit	C or F
F84	Compressor Start Counter	0 to 9999 displayed
F85	Compressor Hour Counter	0 to 9999 displayed
F86	Compressor Hour Counter Reset	No, Yes = reset
F87	Limited Compressor running time	0 to 9999 hours

Model E35-4

(Replaces E35-2 with additional time clock facility)

Set time instructions:

Current temperature displayed


Press Set briefly (Current time displayed)

Press and hold s "Set" (current hours will start flashing)

Use up and down arrows to alter value to current hours and press "Set" to lock in the new value (current minutes will start flashing)

Use up and down arrows to alter value to current minutes and press "Set" to lock in the new value (current time will now be displayed)

Press "M" to return to current temperature view.

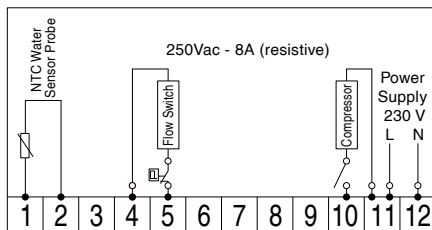

Detailed Parameters

F11: Temperature at which the heat pump will stop at and has a range which is dictated by the values in F14 and F13.

F12: (Differential) Number of degrees + / - from set point (F11) before the heat pump will start.

F13: Maximum water temperature that can be set in F11 parameter.

F14: Minimum water temperature that can be set in F11 parameter.

F19: (Water Sensor Calibration) Adjusts the offset reading for the water sensor probe in situations of reading higher or lower than actual temperature.

F21: (Compressor Time Delay) Minimum time to start after heating signal has been called for.

F29: Set the controller mode between heating or cooling

F31: Boost Temperature minimum value

F32: Boost Temperature differential

F33: Boost Temperature 167 hour interval

F34: Above Boost Temperature duration (hours)

F51: Flow Switch mode options (note: Flow switch will allow comp delay count down if made without break within 1 minute of pump starting, and calling for heating or cooling).

Value	State	Alarm code [FL]	F51
0	Disabled	No flow control and no Alarm	
3	Enabled	Display [FL] on contact break, resume normal display when contact is made	
5	Enabled	Display goes blank when contact breaks, resumes temperature display when contact is made	

F60: 24 Hour Timer Control On / Off

F61: Cycle 1 Start time

F62: Cycle 1 End time

F63: Cycle 2 Start time

F64: Cycle 2 End time

F65: Cycle 3 Start time

F66: Cycle 3 End time

F67: Cycle 4 Start time

F68: Cycle 4 End time

F69: Cycle 5 Start time

F70: Cycle 5 End time

F71: Cycle 6 Start time

F72: Cycle 6 End time

F80: Password prevents alteration of the configuration menu by pressing [M].

To enter a password use the down arrow button 0000 will be displayed, press set and the first 0 will flash, up and down arrow to alter this value between 0 and 9, press set and the second 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the third 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the fourth 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the display will go back to the menu displaying F86. The password is now set and will be required to alter the set point temperature or enter the menu system.

Value	State	Description	F80
OFF	Disabled	No password lock out (Factory setting).	

F81: Temperature units of measure

Value	Description	F81
C	Temperatures are displayed in Degrees Celsius (Factory setting).	
F	Temperatures are displayed in Degrees Fahrenheit	

F84: Number of times the compressor has started.

F85: Displays number of hour's compressor has run.

F86: Default value is No, Yes to reset F85.

F87: Number of hours the compressor will run for before it is stopped, this needs to be reset for the heat pump to run again.


E35-4		
Code	Parameter Name	Range
F11	Temperature Set Point	F14 to F13 (°C)
F12	Temperature Differential	0.1 to 20.0 (°C)
F13	Maximum Temperature Setting	20.0 to 150.0 (°C)
F14	Minimum Temperature Setting	-50.0 to 20.0 (°C)
F19	Water Temperature Offset	-20.0 to 20.0 (°C)
F21	Compressor Time Delay	0 to 10 (minutes)
F29	Controller Mode	Heat or Cool
F31	Boost Temperature minimum value	0.0 to 90.0 (°C)
F32	Boost Temperature differential	0.1 to 20.0 (°C)
F33	Boost Temperature 167 hour interval	1 to 998 (hours)
F34	Maximum Defrost Duration	Off / 1 to 99 (minutes)
F51	Flow switch control mode	0, 3, 5
F60	24 Hour Timer Control Toggle	On / Off
F61	Duration 1 Start time	Time of day hh:mm
F62	Duration 1 Stop time	Time of day hh:mm
F63	Duration 2 Start time	Time of day hh:mm
F64	Duration 2 Stop time	Time of day hh:mm
F65	Duration 3 Start time	Time of day hh:mm
F66	Duration 3 Stop time	Time of day hh:mm
F67	Duration 4 Start time	Time of day hh:mm
F68	Duration 4 Stop time	Time of day hh:mm
F69	Duration 5 Start time	Time of day hh:mm
F70	Duration 5 Stop time	Time of day hh:mm
F71	Duration 6 Start time	Time of day hh:mm
F72	Duration 6 Stop time	Time of day hh:mm
F80	Password	Off / 1 to 9999
F81	Temperature Unit	C or F
F84	Compressor Start Counter	0 to 9999 displayed
F85	Compressor Hour Counter	0 to 9999 displayed
F86	Compressor Hour Counter Reset	No, Yes = reset
F87	Limited Compressor running time	0 to 9999 hours

Model E35-5

(Auto Heat / Chill OR Heat OR Chill only)

Detailed Parameters

- F10: Temperature Dead Band for Heat & Chill Controller
- F11: Temperature at which the heat pump will stop at and has a range which is dictated by the values in F14 and F13.
- F12: (Differential) Number of degrees +/- from set point (F11) before the heat pump will start.
- F13: Maximum water temperature that can be set in F11 parameter.
- F14: Minimum water temperature that can be set in F11 parameter.
- F18: (Defrost Sensor Calibration) Adjusts the offset reading for the defrost sensor probe in situations of reading higher or lower than actual temperature (or consult HWHP about relocating sensor).
- F19: (Water Sensor Calibration) Adjusts the offset reading for the water sensor probe in situations of reading higher or lower than actual temperature.
- F21: (Compressor Time Delay) Minimum time to start after heating signal has been called for.
- F29: Can set three modes (0,1, 2). 0: is not change Auto Heat & Cool. 1: heat mode. It begins to heating when the temperature is under "F11-F10-F12" and stops heating when the temperature is reaching "F1-F10". Only heat, not cool. 2: cool mode: It begins to cooling when the temperature is above "F11+F10+F12", and stops cooling when the temperature is reaching "F11+F10". Only cool, not heat.
- F31: Temperature at which the Defrost Cycle will trigger.
- F32: Temperature at which the Defrost Cycle will terminate.
- F33: Time delay in minutes at which the Defrost Cycle will initiate once triggered by F31 setting.
- F34: Maximum number of minutes the Defrost Cycle will run for.
- F38: Fan status in defrost mode
- F41: Fan Start/Run modes

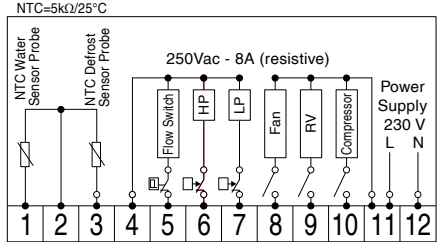

Value	State	Description	F41
1	Fan Starts Delayed	Fan starts after compressor and stops before compressor	
2	Fan Starts Ahead	Fan starts before compressor	
3	Fan Always Run		

- F42: Time parameter in seconds for fan Start/Delay for F41 in modes 1 & 2.
- F43: Time parameter in seconds for fan Stop/Delay for F41 in modes 1 & 2.
- F51: Flow Switch mode options (note: Flow switch will allow comp delay count down if made without break within 1 minute of pump starting, and calling for heating or cooling or auto).

Value	State	Alarm code [FL]	F51
0	Disabled	No flow control and no Alarm	
3	Enabled	Display [FL] on contact break, resume normal display when contact is made	
5	Enabled	Display goes blank when contact breaks, resumes temperature display when contact is made	

F52: High Pressure Safety Switch

Value	State	Alarm code [HP]	F52
0	Disabled	No high pressure control and no Alarm (HP not used).	
3	Enabled	Display [HP] on contact break, resume normal display when contact is made (auto reset).	
4	Enabled	Display [HP] on contact break, does not auto resume when contact is made. User interaction required, press [SET] key to resume (manual reset).	

F53: Low Pressure Safety Switch

Value	State	Alarm code [LP]	F53
0	Disabled	No Low Pressure control and no Alarm (LP not used)	
3	Enabled	Display [LP] on contact break, resume normal display when contact is made (auto reset)	

F80: Password prevents alteration of the configuration menu by pressing [M].

To enter a password use the down arrow button 0000 will be displayed, press set and the first 0 will flash, up and down arrow to alter this value between 0 and 9, press set and the second 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the third 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the fourth 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the display will go back to the menu displaying F86. The password is now set and will be required to alter the set point temperature or enter the menu system.

Value	State	Description	F80
OFF	Disabled	No password lock out (Factory setting).	

F81: Temperature units of measure

Value	Description	F81
C	Temperatures are displayed in Degrees Celsius (Factory setting).	
F	Temperatures are displayed in Degrees Fahrenheit	

F84: Number of times the compressor has started.

F85: Displays number of hour's compressor has run.

F86: Default value is No, Yes to reset F85.

F87: Number of hours the compressor will run for before it is stopped, this needs to be reset for the heat pump to run again.

Alarm Codes:

Code	Cause
A21	SHr means water temperature sensor short OPE means water sensor connection is open
A22	SHr means defrost temperature sensor short OPE means defrost sensor connection is open
FL	No water flow or flow switch failure F51 (Mode 3 only)
HP	High Pressure Safety Switch triggered
LP	Low Pressure Safety Switch triggered
A99	Compressor run time expired

E35-5		
Code	Parameter Name	Range
F10	Temperature Dead Band	0.0 to 20.0 (°C)
F11	Temperature Set Point	F14 to F13 (°C)
F12	Temperature Differential	0.1 to 20.0 (°C)
F13	Maximum Temperature Setting	-50.0 to 150.0 (°C)
F14	Minimum Temperature Setting	-50.0 to 150.0 (°C)
F18	Defrost Temperature Offset	-20.0 to 20.0 (°C)
F19	Water Temperature Offset	-20.0 to 20.0 (°C)
F21	Compressor Time Delay	0 to 10 (minutes)
F29	Controller Mode	0, 1, 2
F31	Defrost Start Temperature	-20.0 to 20.0 (°C)
F32	Defrost End Temperature	0.0 to 50.0 (°C)
F33	Defrost Start Time	1 to 99 (minutes)
F34	Maximum Defrost Duration	1 to 99 (minutes)
F38	Fan status in defrost mode	On / Off
F41	Fan Mode	1, 2, 3
F42	Fan start ahead time	0 to 99 (seconds)
F43	Fan stop delay time	0 to 99 (seconds)
F51	Flow switch control mode	0, 3, 5
F52	High Pressure control mode	0, 3, 4
F53	Low Pressure control mode	0, 3, 4
F80	Password	Off / 1 to 9999
F81	Temperature Unit	C or F
F84	Compressor start-up times	0 to 9999 displayed
F85	Compressor accumulated running time	0 to 9999 displayed (hours)
F86	Compressor start-up times and running time reset	No, Yes = reset
F87	Limited running time	Off / 1 to 9999 (hours)

For further information please phone Hot Water Heat Pumps Ltd



Consultancy • Installation • After Sale Service • Nationwide Authorised Dealer Network

P: (09) 838 9444 - 0800 33 66 33 **F:** (09) 838 6223 **W:** www.waterheating.co.nz
3 Corban Ave, Henderson, Auckland 0612 PO Box 21-586, Henderson, Auckland 0650